





|   |   |                |
|---|---|----------------|
| <p>SELDORF ARCHITECTS<br/>100 EAST 97TH STREET<br/>NEW YORK, NY 10023<br/>TEL: 212 246 1000<br/>WWW.SELDORFARCHITECTS.COM</p> | <p>300 WEST 147th &amp;<br/>PUSH PLAN</p> | <p>LPC-002</p> |
|---|---|----------------|

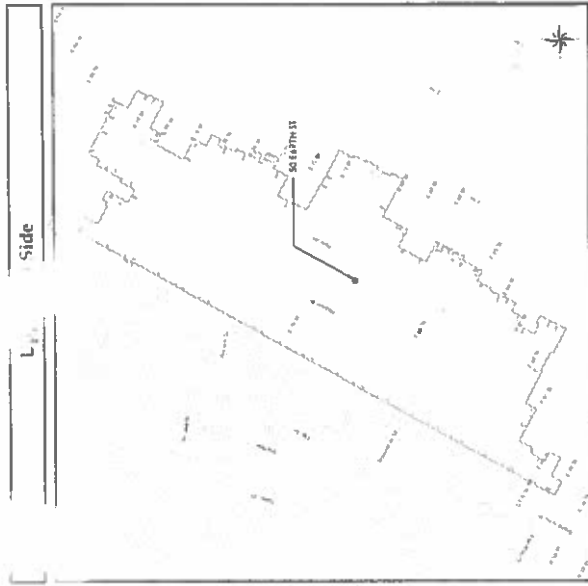

Upper East Side  
Historic District  
Mandated  
Designated (July 19, 1981)

Historic District Boundaries

HISTORIC MAP

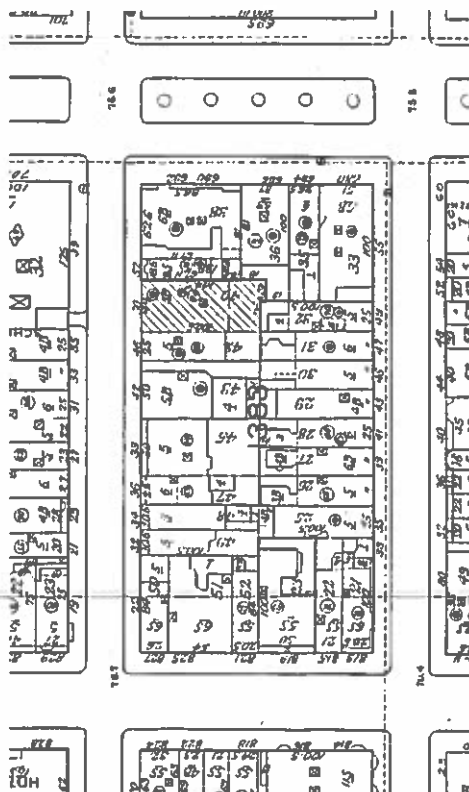

SANBORN MAP

